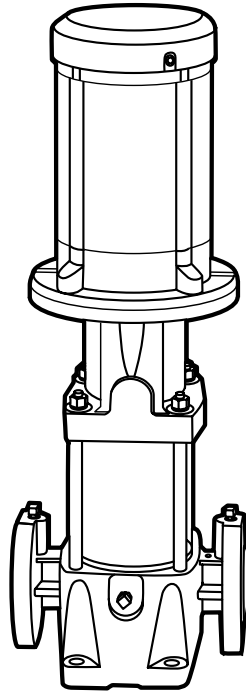


BERKELEY®

Record the following information from the motor and pump nameplates for future reference:

Pump Model No.	
Bill of Material No.	
Motor Model No.	
Motor Serial No.	
H.P.	Volts/Hz/Ph
Rated Amp Draw	

Table Of Contents

Safety Instructions	2
Applications and Operating Ranges	2-4
Installation	5-6
Electrical	6-7
Operation.....	7-8
Maintenance	9-12
Troubleshooting.....	13
Warranty	14
Repair Parts.....	15-18

Important Safety Instructions

SAVE THESE INSTRUCTIONS - This manual contains important instructions that should be followed during installation, operation, and maintenance of the product. Save this manual for future reference.

! This is the safety alert symbol. When you see this symbol on your pump or in this manual, look for one of the following signal words and be alert to the potential for personal injury!

! DANGER indicates a hazard which, if not avoided, will result in death or serious injury.

! WARNING indicates a hazard which, if not avoided, could result in death or serious injury.

! CAUTION indicates a hazard which, if not avoided, could result in minor or moderate injury.

NOTICE addresses practices not related to personal injury.

To avoid serious or fatal personal injury and possible property damage, carefully read and follow the safety instructions.

1. Install pump according to all code requirements.
2. Compare pump nameplate data with desired operating range.
3. Pump only liquids compatible with pump component materials (that is, liquids that will not attack the pump).
4. Make sure plumbing is adequate to handle system pressure.
5. Periodically perform maintenance inspection on pump and system components.
6. Wear safety glasses at all times when working on pumps.

California Proposition 65 Warning

! WARNING This product and related accessories contain chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

Inspect the Shipment

The vertical multistage centrifugal inline pump has been carefully inspected and packaged to assure safe delivery. Inspect the pump and fittings and report to the carrier any items which are damaged or missing.

Confirm that you have the right pump:

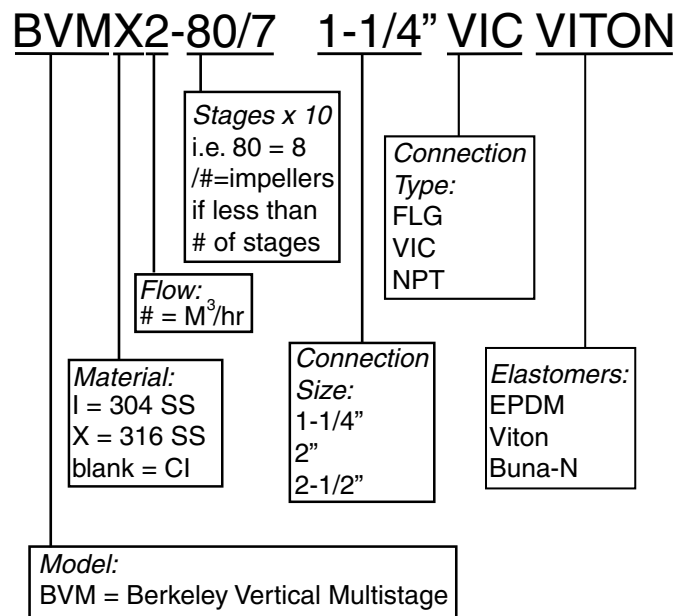


Figure 1 - Model Plate Information

Applications and Operating Ranges.

Berkeley multistage in-line centrifugal pumps are designed for liquid transfer, circulation, and pressure boosting of hot or cold clean water or other thin, non-explosive liquids, not containing solid particles or fibers, which will not chemically attack the pump materials.

Typical applications include:

- Municipal water supply and pressure boosting
- Boiler feed and condensate systems
- Cooling water systems
- Irrigation
- Fire fighting

Maximum Ambient Temperature 104° F(40° C)

Liquid Temperature Range 5° F to 250° F
(-15° C to +121° C)

Maximum Permissible

Operating Pressure Curves See Figure 4

Electrical Data: See Motor Nameplate

Dimensions and Port-to-Port

Lengths : See Figures 2 and 3 plus Tables 1 and 2

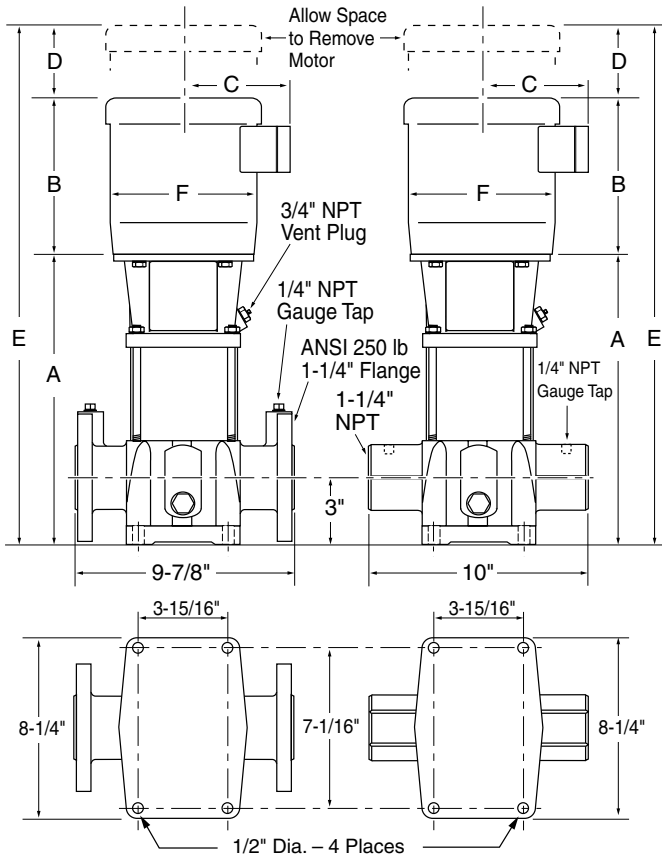


Figure 2A - Height, width and baseplate dimensions for BVM2 and BVM4 Series pumps

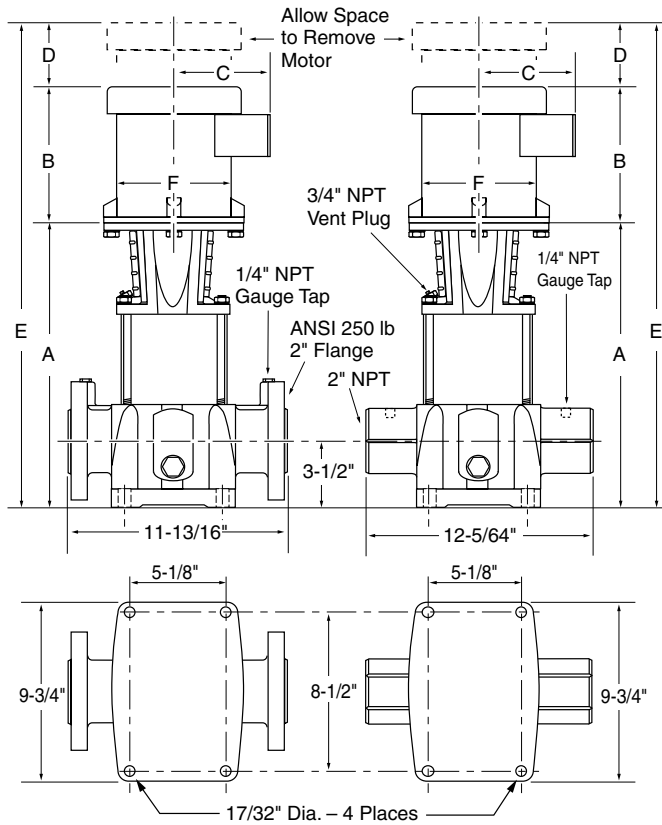


Figure 2B - Height, width, and baseplate dimensions for BVM8 and BVM16 Series pumps

TABLE I – Maximum Height and Width Dimensions*

Model Number	Dimension in Inches					
	A	B	C	D	E	F
BVM2-30/2	11-3/8	9-1/4	4-7/8	2	22-5/8	6
BVM2-30	11-3/8	9-7/8	4-7/8	2	23-1/4	6
BVM2-40	12	11-1/8	5-1/4	2	25-1/4	7-1/8
BVM2-50	12-3/4	11-1/8	5-3/4	2-1/8	26	7-1/4
BVM2-60	13-1/2	11-1/8	5-3/4	2-1/8	26-5/8	7-1/4
BVM2-70	14-1/8	12-1/8	5-3/4	2-1/8	28-1/4	7-1/4
BVM2-80	14-7/8	12-1/8	5-3/4	2-1/8	29	7-1/4
BVM2-90	15-15/16	12-5/16	6-7/8	2-7/8	31-1/8	8-1/2
BVM2-100	16-5/8	13-5/8	2-7/8	2-7/8	33-1/4	8-1/2
BVM2-110	17-3/8	12-5/16	6-7/8	2-7/8	32-17/32	8-1/2
BVM2-120	18-1/8	13-5/8	6-7/8	2-7/8	34-5/8	8-1/2
BVM2-130	18-13/16	12-5/16	6-7/8	2-7/8	34	8-1/2
BVM2-140	19-1/2	15-9/32	8	3-3/8	38-5/32	10-9/16
BVM2-150	20-1/4	15-1/4	8	3-3/8	38-7/8	10-5/8
BVM2-160	20-15/16	15-1/4	8	3-3/8	39-9/16	10-5/8
BVM2-170	21-9/16	15-1/4	8	3-3/8	40-9/32	10-5/8
BVM2-180	22-3/8	15-1/4	8	3-3/8	41	10-5/8
BVM4-20/1	11-3/8	9-1/4	4-7/8	2	22-5/8	6
BVM4-20	11-3/8	9-7/8	4-7/8	2	23-1/4	6
BVM4-30	12-3/8	11-1/8	5-1/4	2	25-5/8	7-1/8
BVM4-40	13-1/2	11-1/8	5-3/4	2-1/8	26-5/8	7-1/4
BVM4-50	14-1/2	12	5-3/4	2-1/8	28-5/8	7-1/4
BVM4-60	16	13-5/8	6-7/8	2-7/8	32-1/2	8-1/2
BVM4-80/7	18-1/8	13-5/8	6-7/8	2-7/8	34-5/8	8-1/2
BVM4-80	18-1/8	13-5/8	6-7/8	2-7/8	34-5/8	8-1/2
BVM4-90	19-5/32	15-1/4	8	3-3/8	37-13/16	10-5/8
BVM4-100	20-1/4	15-1/4	8	3-3/8	38-7/8	10-5/8
BVM4-110	21-1/4	15-1/4	8	3-3/8	39-15/16	10-5/8
BVM4-120	22-3/8	15-1/4	8	3-3/8	41	10-5/8
BVM4-130	23-13/32	15-1/4	8	3-3/8	42	10-5/8
BVM4-140	24-1/2	15-1/4	8	3-3/8	43-1/8	10-5/8
BVM4-150	25-1/2	15-1/4	8	3-3/8	44-3/16	10-5/8
BVM4-160	26-5/8	15-1/4	8	3-3/8	45-1/4	10-5/8
BVM8-20/1	13-13/16	9-7/8	4-7/8	2	25-13/16	6
BVM8-20	13-13/16	11-1/8	5-3/4	2-1/8	27-1/16	7-1/4
BVM8-30	16-9/16	13-5/8	6-7/8	2-7/8	33-1/16	8-1/2
BVM8-40	17-11/16	13-5/8	6-7/8	2-7/8	34-5/16	8-1/2
BVM8-50	18-15/16	15-1/4	8	3-3/8	37-9/16	10-5/8
BVM8-60	20-1/16	15-1/4	8	3-3/8	38-13/16	10-5/8
BVM8-70	20-1/8	15-1/4	8	3-3/8	38-3/4	10-5/8
BVM8-80	22-7/16	15-1/4	8	3-3/8	41-1/16	10-5/8
BVM8-90	24-13/16	15-1/4	8	3-3/8	43-15/32	10-5/8
BVM8-100	24-13/16	15-1/4	8	3-3/8	43-7/16	10-5/8
BVM8-110	26	16-3/8	8-3/4	3-3/8	45-13/16	10-5/8
BVM8-120	27-3/16	16-1/2	8-3/4	3-3/8	47-1/16	10-5/8
BVM8-130	28-3/8	16-3/8	8-3/4	3-3/8	48-1/8	10-5/8
BVM8-140	29-9/16	16-3/8	8-3/4	3-3/8	49-5/16	10-5/8
BVM8-150	32-3/8	19-21/32	9-1/2	4-1/4	56-3/8	12-15/16
BVM8-160	32-7/16	19-5/8	9-1/2	4-1/4	56-5/16	13
BVM16-30/2	17-3/4	15-1/4	8	3-3/8	36-1/2	10-5/8
BVM16-30	17-3/4	15-1/4	8	3-3/8	36-1/2	10-5/8
BVM16-40	19-5/8	15-1/4	8	3-3/8	38-1/4	10-5/8
BVM16-50	21-3/8	16-3/8	8-3/4	3-3/8	41-1/8	10-5/8
BVM16-60	23-5/8	19-5/8	9-1/2	4-1/4	47-1/2	13
BVM16-70	25-3/8	19-5/8	9-1/2	4-1/4	49-1/4	13
BVM16-80	27-1/8	19-5/8	9-1/2	4-1/4	51-1/8	13
BVM16-90	28-7/16	21-3/4	9-3/16	4	54-3/16	11-1/2
BVM16-100	30-1/4	21-3/4	9-1/8	4	56	11-1/2
BVM16-110	31-13/16	21-3/4	9-1/2	3-1/4	56-13/16	12-15/16
BVM16-120	33-5/8	21-3/4	9-1/2	3-1/4	58-5/8	13

* Measurements represent the largest number possible for each Model.

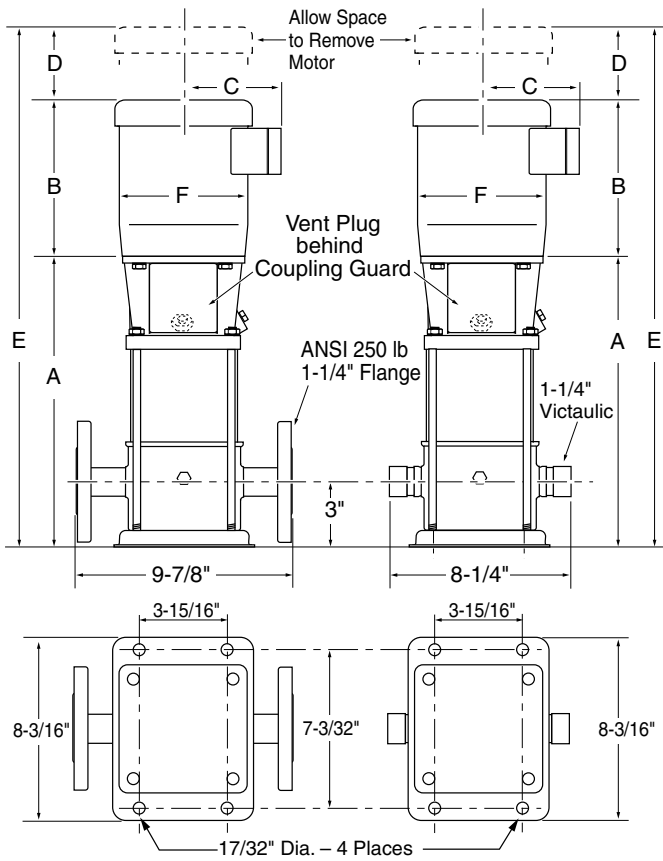


Figure 3A - Height, width and baseplate dimensions for BVMIX2 and BVMIX4 Series pumps

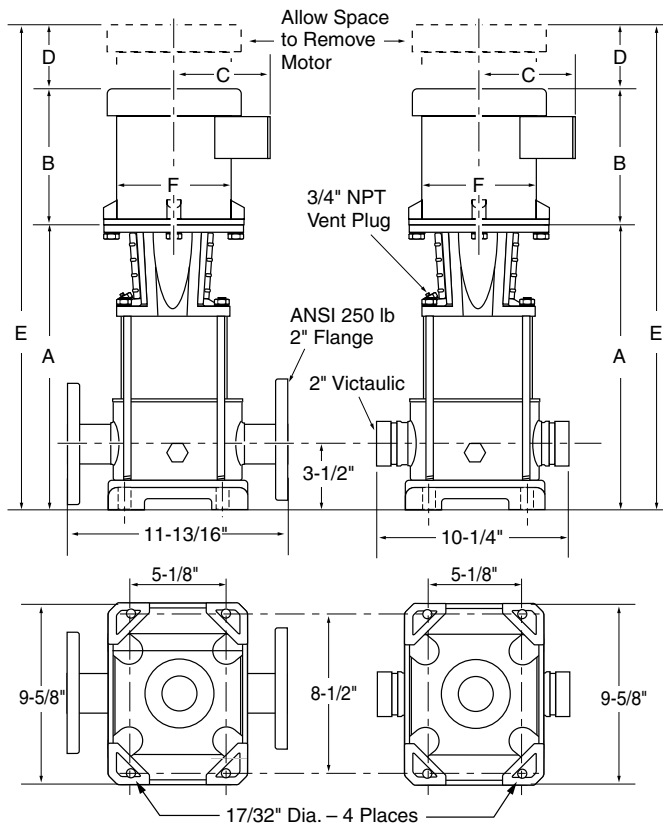


Figure 3B - Height, width, and baseplate dimensions for BVMIX8 and BVMIX16 Series pumps

TABLE II – Maximum Height and Width Dimensions*

Model Number	Dimension in Inches					
	A	B	C	D	E	F
BVMI/X2-30/2	11-3/4	9-1/4	4-7/8	2	23	6
BVMI/X2-30	11-3/4	9-7/8	4-7/8	2	23-5/8	6
BVMI/X2-40	12-3/8	11-1/8	5-1/4	2	25-5/8	7-1/8
BVMI/X2-50	13-1/8	11-1/8	5-3/4	2-1/8	26-3/8	7-1/4
BVMI/X2-60	13-7/8	11-1/8	5-3/4	2-1/8	27	7-1/4
BVMI/X2-70	14-1/2	12-1/8	5-3/4	2-1/8	28-5/8	7-1/4
BVMI/X2-80	15-1/4	12-1/8	5-3/4	2-1/8	29-3/8	7-1/4
BVMI/X2-90	16-3/8	12-5/16	6-7/8	2-7/8	31-17/32	8-1/2
BVMI/X2-100	17	13-5/8	2-7/8	2-7/8	33-5/8	8-1/2
BVMI/X2-110	17-3/4	12-5/16	6-7/8	2-7/8	33	8-1/2
BVMI/X2-120	18-1/2	13-5/8	6-7/8	2-7/8	35	8-1/2
BVMI/X2-130	19-3/16	12-5/16	6-7/8	2-7/8	34-3/8	8-1/2
BVMI/X2-140	19-15/16	15-1/4	8-1/16	3-3/8	38-9/16	10-5/8
BVMI/X2-150	20-5/8	15-1/4	8	3-3/8	39-1/4	10-5/8
BVMI/X2-160	21-5/16	15-1/4	8-1/16	3-3/8	40	10-5/8
BVMI/X2-170	22-1/32	15-1/4	8-1/16	3-3/8	40	10-5/8
BVMI/X2-180	22-3/4	15-1/4	8	3-3/8	41-3/8	10-5/8
BVMI/X4-20/1	11-3/4	9-1/4	4-7/8	2	23	6
BVMI/X4-20	11-3/4	9-7/8	4-7/8	2	23-5/8	6
BVMI/X4-30	12-3/4	11-1/8	5-1/4	2	26	7-1/8
BVMI/X4-40	13-7/8	11-1/8	5-3/4	2-1/8	27	7-1/4
BVMI/X4-50	14-7/8	12	5-3/4	2-1/8	29	7-1/4
BVMI/X4-60	16-3/8	13-5/8	6-7/8	2-7/8	32-7/8	8-1/2
BVMI/X4-80/7	18-1/2	13-5/8	6-7/8	2-7/8	35	8-1/2
BVMI/X4-80	18-1/2	13-5/8	6-7/8	2-7/8	35	8-1/2
BVMI/X4-90	19-17/32	15-1/4	8-1/16	3-3/8	38-3/16	10-5/8
BVMI/X4-100	20-5/8	15-1/4	8	3-3/8	39-1/4	10-5/8
BVMI/X4-110	21-9/16	15-1/4	8-1/16	3-3/8	40-3/16	10-5/8
BVMI/X4-120	22-3/4	15-1/4	8	3-3/8	41-3/8	10-5/8
BVMI/X4-130	23-13/16	15-1/4	8-1/16	3-3/8	42-1/2	10-5/8
BVMI/X4-140	24-7/8	15-1/4	8	3-3/8	43-1/2	10-5/8
BVMI/X4-150	25-15/16	15-1/4	8-1/16	3-3/8	44-17/32	10-5/8
BVMI/X4-160	27	15-1/4	8	3-3/8	45-3/8	10-5/8
BVMI/X8-20/1	13-13/16	9-7/8	4-7/8	2	25-13/16	6
BVMI/X8-20	13-13/16	11-1/8	5-3/4	2-1/8	27-1/16	7-1/4
BVMI/X8-30	16-9/16	13-5/8	6-7/8	2-7/8	33-1/16	8-1/2
BVMI/X8-40	17-11/16	13-5/8	6-7/8	2-7/8	34-5/16	8-1/2
BVMI/X8-50	18-15/16	15-1/4	8	3-3/8	37-9/16	10-5/8
BVMI/X8-60	20-1/16	15-1/4	8	3-3/8	38-13/16	10-5/8
BVMI/X8-70	20-3/16	15-1/4	8-1/16	3-3/8	38-13/16	10-5/8
BVMI/X8-80	22-7/16	15-1/4	8	3-3/8	41-1/16	10-5/8
BVMI/X8-90	24-15/16	15-1/4	8-1/16	3-3/8	43-9/16	10-5/8
BVMI/X8-100	24-13/16	15-1/4	8	3-3/8	43-7/16	10-5/8
BVMI/X8-110	27-5/16	16-3/8	8-7/8	3-3/8	47-1/16	10-5/8
BVMI/X8-120	27-3/16	16-1/2	8-3/4	3-3/8	47-1/16	10-5/8
BVMI/X8-130	27-5/16	16-3/8	8-7/8	3-3/8	47-1/16	10-5/8
BVMI/X8-140	29-9/16	16-3/8	8-3/4	3-3/8	49-5/16	10-5/8
BVMI/X8-150	32-9/16	19-11/16	9-1/2	4-1/4	56-7/16	12-15/16
BVMI/X8-160	32-7/16	19-5/8	9-1/2	4-1/4	56-5/16	13
BVMI/X16-30/2	17-3/4	15-1/4	8	3-3/8	36-1/2	10-5/8
BVMI/X16-30	17-3/4	15-1/4	8	3-3/8	36-1/2	10-5/8
BVMI/X16-40	19-5/8	15-1/4	8	3-3/8	38-1/4	10-5/8
BVMI/X16-50	21-3/8	16-3/8	8-3/4	3-3/8	41-1/8	10-5/8
BVMI/X16-60	23-5/8	19-5/8	9-1/2	4-1/4	47-1/2	13
BVMI/X16-70	25-3/8	19-5/8	9-1/2	4-1/4	49-1/4	13
BVMI/X16-80	27-1/8	19-5/8	9-1/2	4-1/4	51-1/8	13
BVMI/X16-90	28-9/16	21-3/4	9-3/16	4	54-1/4	11-1/2
BVMI/X16-100	30-1/4	21-3/4	9-1/8	4	56	11-1/2
BVMI/X16-110	31-15/16	21-3/4	9-1/2	3-1/4	56-15/16	12-15/16
BVMI/X16-120	31-5/8	21-3/4	9-1/2	3-1/4	58-5/8	13

* Measurements represent the largest number possible for each Model.

NOTICE: BVMI models are 304 stainless steel; BVMX models are 316 stainless steel.

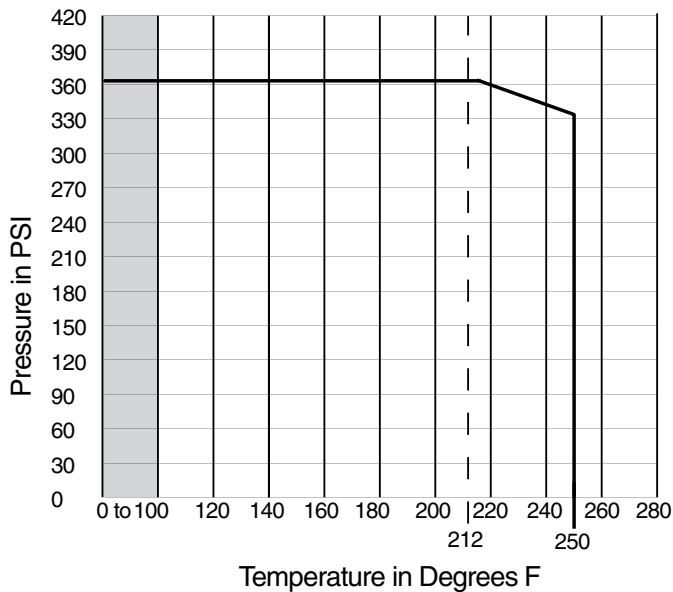


Figure 4 - Maximum Permissible Operating Pressure - all BVM models

Installation

⚠ WARNING Risk of electric shock. Can shock, burn or kill. Ground pump motor correctly before connecting to power supply, per article 250-80 of the National Electrical Code (NEC) in the U.S., or the Canadian Electrical Code (CEC), as applicable.

Location

Locate pump in a dry, well ventilated area, not subject to freezing or extreme variations in temperature.

Mount pump a minimum of 6" from any obstruction or hot surface. Install the pump with the motor shaft vertical. Make sure that an adequate supply of cool air reaches the motor cooling fan. Maximum ambient air temperature is 104° F (40° C).

For open systems requiring suction lift, locate the pump as close to the water source as possible.

Foundation

Foundation should be concrete or a similarly rigid foundation to provide a secure, stable mounting base for the pump.

Secure pump to foundation using all bolt holes. Refer to Figures 2 and 3 for bolt plate dimensions. Be sure that all four pads on the base are properly supported.

Shim pump base to make sure that pump is level.

Piping

⚠ WARNING Risk of explosion and scalding. Do not run pump with discharge valve closed; the water in the pump may boil, with risk of explosion and steam burns to anyone near.

If there is any danger of the pump running against a closed discharge valve, install a pressure relief or by-pass valve in the discharge pipe to allow for minimum liquid flow through the pump. Minimum liquid flow through the pump is needed for cooling and lubrication of the pump (See Table IV). Run the bypass/relief valve and discharge pipe to a floor drain or a tank for collection.

TABLE IV – Minimum Pumping Rates

Type	Liquid Temperature
	+5° F to +250° F
BVM2	1 GPM
BVM4	2 GPM
BVM8	4 GPM
BVM16	8 GPM

Suction pipe should be adequately sized (See Table V) and run as straight and as short as possible to keep friction losses to a minimum. Pipes, valves, and fittings must have a pressure rating equal to or greater than the maximum system pressure.

TABLE V – Minimum Suction Pipe Sizes

Type	Pipe Size
BVM2	1-1/4" Nominal Diameter, Schedule 40 Pipe
BVM4	1-1/4" Nominal Diameter, Schedule 40 Pipe
BVM8	2" Nominal Diameter, Schedule 40 Pipe
BVM16	2" Nominal Diameter, Schedule 40 Pipe

Pressure check the discharge piping as required by codes or local regulations.

"Inlet" and "Outlet" are marked on the pump base to show the direction of the liquid flow through the pump.

Install anti-vibration mountings on either side of the pump if a minimum noise level is desired.

Install isolation valves in both inlet and outlet pipes near the pump (see Figure 5). This allows for removal of pump for service without draining the system and isolation of the pump in case of a flooded suction condition.

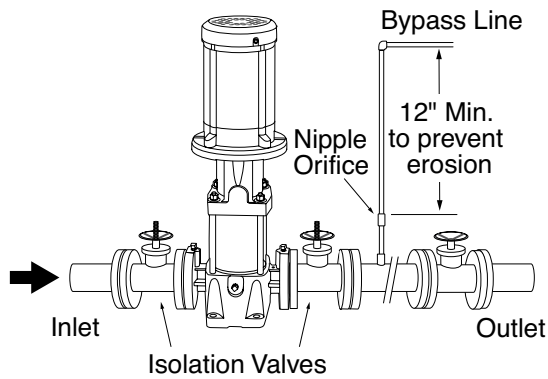


Figure 5 - Bypass required if pump might operate with discharge valve closed. See Table IV for minimum required flow through pump to prevent overheating and to ensure lubrication.

If the system pressure is greater than the pumps maximum inlet pressure the limits of the pump can be exceeded if the discharge pressure backs up to the inlet side of the pump. Installation of a check valve in the discharge pipe is recommended to prevent this condition.

Make sure, especially on the inlet side of the pump, that there are no airlocks in the system. See Figure 6 for correct pipe work to avoid airlocks. The suction pipe should be level or slightly rising.

Support all piping independently of the pump so the weight of the piping system does not strain the pump case. Make sure that the expansion and contraction of the piping system from temperature variations cannot put a strain on the pump.

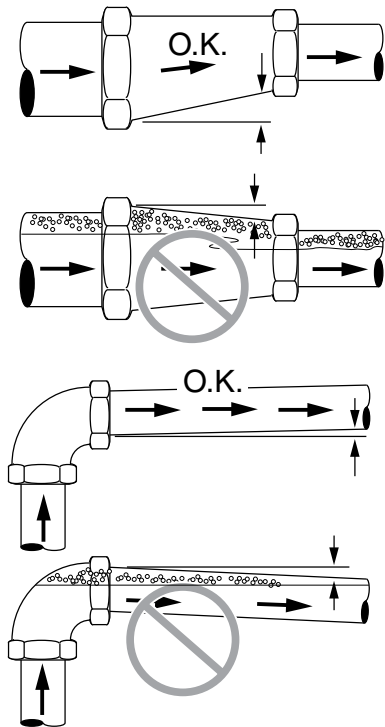


Figure 6 - Install Pipe Correctly to Prevent Air Locks

If the system or pump must be drained periodically (especially if the discharge pipe is horizontal or slopes downward away from the pump), install a loop and vacuum valve as shown in Figure 7 to protect the pump against running dry. The highest point of the loop should be at least as high as the lowest point of the motor. This loop/valve combination will allow the pump and the system to be drained independently of one another.

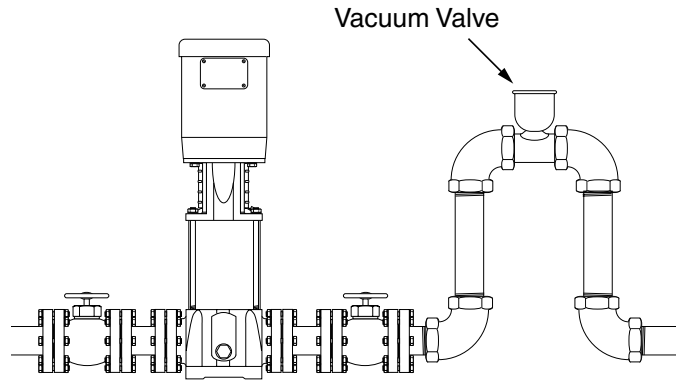


Figure 7 - Loop and Vacuum Valve Installation

Electrical

⚠ WARNING Risk of electric shock. Can shock, burn or kill. All electrical work should be performed by a qualified electrician in accordance with the National Electrical Code and all local codes and regulations. Make sure that the motor voltage, phase, and frequency match the incoming electrical supply. The proper operating voltage and other electrical information can be found on the motor nameplate. These motors are designed to run up to $\pm 10\%$ of the nameplate-rated voltage. The wiring connection diagram can be found on either a plate attached to the motor or on a diagram inside the terminal box cover.

- **If voltage variations are greater than $\pm 10\%$ do not operate the pump.**
- Incorrect voltage can cause fire or serious damage to the motor and voids warranty.
- Ground the pump motor correctly before connecting it to the power supply.
- Follow the wiring instructions when connecting the motor to the power lines.

Position of Terminal Box

To turn the motor so that the terminal box faces the right direction, proceed as follows:

1. Disconnect the power to the pump motor.
2. Remove the coupling guards (use a screwdriver).
3. Remove the couplings.
4. Remove the bolts that fasten the motor to the pump.
5. Turn the motor to the required position (in quarter-turn increments).
6. Follow steps 10 - 20 under *Motor Replacement*.

Field Wiring

All wiring connections and wiring sizes must meet National Electrical Code and local requirements.

Motor Protection

See the motor nameplate for electrical connection/wiring diagram.

Berkeley pumps must be used with the proper size and type of motor starter to ensure protection against damage from low voltage, phase failure, current imbalances, and overloads. The overload should be sized to trip at the full-load current rating of the motor.

OPERATION

Priming

▲ WARNING Risk of explosion and scalding. Do not run the pump with the discharge valve closed; the water in the pump may boil, causing risk of explosion and steam burns to anyone nearby.

▲ WARNING Risk of electric shock. Can shock, burn or kill. Disconnect all power to the pump before servicing or working on the pump. Make sure that the power is locked out and that the pump cannot be accidentally started.

NOTICE: Under no circumstances should the pump be operated without flow through the pump. Never operate the pump dry.

Operation of closed systems or open systems with the liquid level above the pump priming plug:

1. Close the discharge isolating valve and loosen the needle valve located in the assembly in the pump head (Figure 8). Do not remove the needle valve.

NOTICE: On BVMI(X)2/4 models, remove the coupling guard for access to the vent plug.

▲ CAUTION Risk of flooding. Can cause personal injury and/or property damage. Watch the direction of the priming plug and make sure that the liquid escaping from it does not injure persons nearby or damage the motor or other components. In hot water installations, pay particular attention to the risk of injury from scalding hot water.

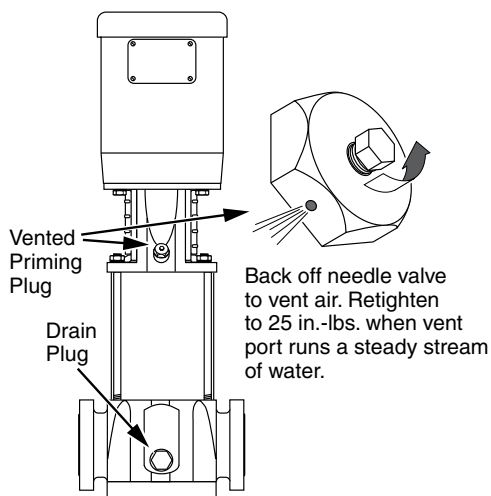


Figure 8 - Priming and Drain Plugs

2. Slowly open the isolation valve in the suction pipe until a steady stream of liquid runs out the vent in the priming port.
3. Tighten needle valve to 25 inch-pounds. Completely open isolation valves.

NOTICE: Please turn to *Starting* before proceeding any further.

Operation of open systems with the liquid level below the top of the pump:

NOTICE: The suction pipe requires a check valve or isolation valve.

1. Close the discharge isolation valve.
2. Remove the vented priming plug.
3. Pour liquid through the priming port until the suction pipe and the pump are completely filled with liquid.
4. Replace the vented priming plug and tighten it securely.
5. Repeat steps 1-4 until the pump is primed.

NOTICE: Please turn to *Starting* before proceeding any further.

Checking Direction of Rotation

NOTICE: Do not disconnect the motor from the shaft to check the direction of rotation. If you remove the coupling, then you must adjust the shaft position when you reinstall it. This must be done before starting the pump.

Arrows on the pump head show the correct direction of rotation. When seen from the motor fan, the pump should rotate counterclockwise (↺). For pump motors without a fan remove one of the coupling guards and look at the coupling to determine the direction of rotation. Turn off the pump and replace coupling guard.

NOTICE: Do not check the direction of rotation until the pump has been filled with liquid. See "Priming", at left and above.

1. Switch power off.
2. Remove the coupling guard and rotate the pump shaft to be certain it can turn freely. Replace the coupling guard.
3. Verify that the electrical connections are in accordance with the wiring diagram on the motor.
4. If the fan is visible, turn on and off to verify rotation.
5. To reverse the direction of rotation, first switch OFF the power supply.
6. On three-phase motors, switch 2 of the 3 power leads on the load side of the starter. On single-phase motors, see the connection diagram on the motor nameplate. Change the wiring as indicated.

▲ WARNING Risk of electric shock. Can shock, burn or kill. Ground the pump motor correctly before connecting to power supply per article 250-80 of National Electrical Code (NEC) in the U.S., or the Canadian Electrical Code (CEC), as applicable.

7. Switch on the power supply and recheck the direction of motor rotation.

Starting

1. If a suction line isolation valve has been installed, check to be sure that it is completely opened.
2. For initial starting, the isolation valve in the discharge pipe should be almost closed.
3. Start the pump.
4. When the piping system has been filled with liquid, slowly open the discharge isolation valve until it is completely open. Opening the valve too fast may result in water hammer in the discharge pipe. If the pump or system start to rattle, the pump is cavitating; to avoid damage to the pump, reduce the flow through the discharge isolation valve until the rattling stops. If this does not give adequate flow for your installation, call your installer or system designer.
5. Record the voltage and amperage of the motor. Adjust the motor overloads if required.
6. If pressure gauges have been installed, check and record operating pressures.
7. Check all controls for proper operation.

Motor Bearings

For the greasing schedule and greasing procedure of the motor bearings follow the motor manufacturers recommendations.

Calculating Minimum Inlet Pressure:

Minimum inlet pressure is required to avoid cavitation in the pump and is calculated as follows:

$$H = P_b - \text{NPSHR} - H_f - H_v - H_s$$

H = Minimum Inlet Pressure in Feet of Head

P_b = Barometric Pressure in Feet

1 Bar = 29.53 inches of Mercury (Hg)

1 PSI = 2.31 Ft of Head

1 Bar = 33.5 Ft. of Head

NPSHR = Net Positive suction head required. To be read from the NPSHR curve, Figure 9, at the highest flow the pump will be delivering.

H_f = Friction Loss in suction pipe in ft of head

H_v = Vapor pressure in feet of head (See Table VI).

H_s = A safety margin of 1.64 ft of head

Example for BVM8:

If: Flow = 60 GPM

P_b = 1 Bar = 29.53 Inches of Mercury*
(Convert from Bar to Feet of Head)

1 Inch of mercury = 1.13' feet of water

T = 100° F

NPSHR = 10' (See Figure 9)

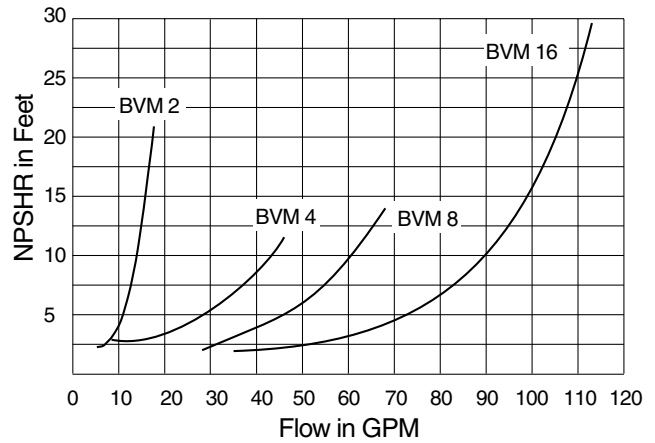


Figure 9 - BVM2 through BVM16
Net Positive Suction Head Requirement (NPSHR)

$$H_f = 10' \text{ of } 2'' \text{ Steel Pipe @ } 11.9' \text{ of loss per } 100' \text{ of Pipe } (H_f = 11.9'/100' = 1.19')$$

$$H_v = 2.195' \text{ (from Table VI)}$$

TABLE VI – Vapor Pressure of Water

Temperature in °F (°C)	Vapor Pressure in PSIA (kPa)	Absolute Pressure in Feet (M) of Water
32 (0)	0.089 (.61)	0.205 (.062)
40 (4.4)	0.122 (.84)	0.281 (.086)
60 (15.6)	0.256 (1.77)	0.592 (.180)
80 (26.7)	0.507 (3.50)	1.172 (.358)
100 (37.8)	0.95 (6.55)	2.195 (.669)
120 (48.9)	1.695 (11.69)	3.914 (1.193)
140 (60.0)	2.892 (19.94)	6.681 (2.036)
160 (71.1)	4.745 (32.72)	10.961 (3.341)
180 (82.2)	7.515 (51.84)	17.36 (5.291)
200 (93.3)	11.529 (79.49)	26.632 (8.117)
210 (98.9)	14.125 (97.39)	32.629 (9.945)
212 (100)	14.698 (101.34)	33.952 (10.349)
220 (104.4)	17.188 (118.51)	39.704 (12.102)
230 (110.0)	20.78 (143.28)	48.002 (14.631)
240 (115.6)	24.97 (172.17)	57.681 (17.581)
248 (120.0)	28.79 (188.51)	66.505 (20.271)

$$H_s = 1.64' \text{ (safety factor from above)}$$

Then: $H = 33.5' * - \text{NPSHR} - H_f - H_v - H_s$

$$H = 33.5' - 10' - 1.19' - 2.195' - 1.64 = 18.475'$$

$$H = 18.475' = \text{Minimum Inlet Pressure}$$

* 1 Bar = 14.5 PSI x 2.31 Ft of Head = 33.5'

Maintenance

Motor Replacement

For Reference Numbers [shown as (3) or (5)], refer to the Exploded View, Figure 14, for BVM2 and BVM4 Series Models, Figure 16 for BVM1/X2 and BVM1/X4 Models, Figure 15 for BVM8 and BVM16 Series Models, and Figure 17 for BVM1/X8 and BVM1/X16 Series Models.

⚠ WARNING Risk of electric shock. Can shock, burn or kill. Disconnect all power to the pump before servicing or working on pump. Make sure that power is locked out and that pump cannot be accidentally started.

1. Disconnect the power to the pump motor.
2. Close the nearest suction and discharge valves.
3. Remove the coupling guards (4) by prying them loose with a screw driver.
4. Remove the socket head screws (3) and the coupling halves (2) from the shaft (16A). For additional reference, see Figure 10.

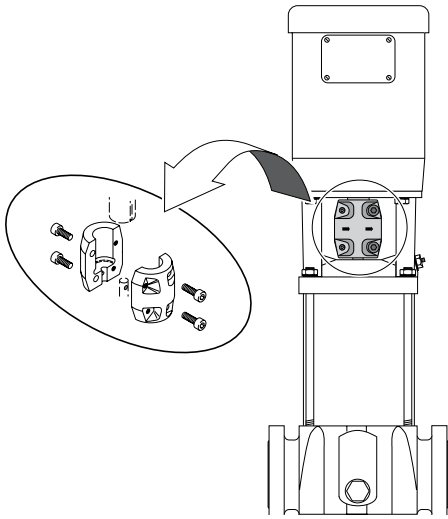


Figure 10 - Remove the Socket Head Screws and the Coupling Halves

- NOTICE:** Socket head screws are metric. See Table VIII for specific metric driver sizes.
5. Remove the shaft pin (5).
NOTICE: Pin has been discontinued and if present does not need to be reinstalled.
 6. Remove the capscrews (13), flatwashers (11), and lockwashers (12) that hold the motor (1) and the motor bracket (6) together.
 7. Pull the old motor up and off of the motor bracket.
NOTICE: Note the location of the conduit box on the motor.
 8. Thoroughly clean the surfaces of the mounting flanges on the new motor and the pump end.
 9. Install the new motor on the pump with the conduit box in the desired position.
 10. Lubricate the capscrews (13) with oil.
 11. Reinstall the lockwashers, flatwashers, and capscrews that hold the motor and the motor bracket together, then tighten evenly and diagonally. See Table VIII for torque specifications.

12. Install the collar (13B) onto the shaft. With the collar resting on the motor bracket, tighten the collar bolt.

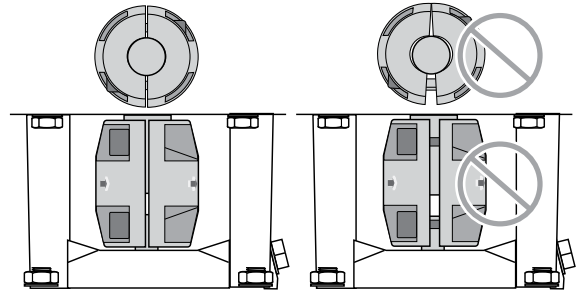


Figure 11A - Make Sure that the Coupling Halves are Evenly Tightened

13. Raise the height of the pump shaft by inserting the stack height adjustment tool (see Figure 11B) below the collar.

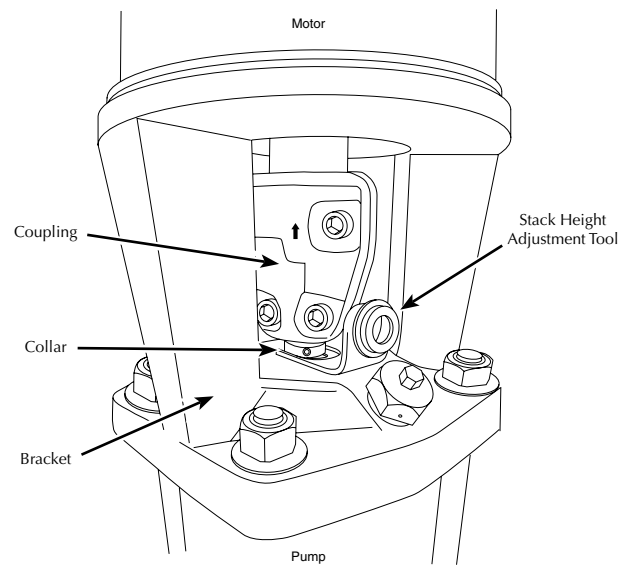


Figure 11B - Using the stack height adjusting tool

14. Reinstall the coupling halves (2) on the pump and motor shaft.
15. Snug the socket head cap screws (3).
NOTICE: Torque settings are critical to prevent coupling movement. Refer to Table VIII for torque specifications.
16. Remove the stack height adjustment tool and secure it to the top of a staybolt.
17. Rotate the shaft to make sure that there is no interference. After assembly there should be a small gap between the collar and the bracket. If rubbing is noted, repeat steps 13, 14, and 15 to readjust pump shaft height.
18. Reinstall the coupling guards by snapping them into place.
NOTICE: The guards should be in place before the unit is run.
19. Open the suction and discharge valves. Turn the power back on.

Replacing Pump Stack

For Reference Numbers [shown as (3) or (5)], refer to the Exploded View, Figure 14 for the BVM2 and BVM4 Series Models and Figure 15 for BVM8 and BVM16 Series Models.

▲ WARNING Risk of explosion and scalding. Do not run pump with discharge valve closed; the water in the pump may boil, causing risk of explosion and steam burns to anyone nearby.

1. Follow steps 1-8 under *Motor Replacement*, then proceed with step 2 below.
2. Remove the four staybolt nuts, flatwashers, and lockwashers (7, 8, and 9) from the staybolts (19).
NOTICE: It is not necessary to remove the staybolts when replacing the stack.
3. Lift the motor bracket (6) off of the pump body.
NOTICE: Note the position of the priming plug. The priming plug must be returned to its original position during reassembly.
4. Remove and discard upper sleeve O-ring* (17).
5. Clean gasket seat.
6. Remove and replace round spring ring (BVM2 and BVM4) or conic spring (BVM8 and BVM16) (14).
7. Pull the old stack (16A through 16L) out of the stainless steel sleeve (18) by pulling straight up on the pump shaft (16A).
8. Remove the stainless steel sleeve (18).
9. Remove and discard the bottom sleeve O-ring* (17).
10. Clean the O-ring seat.
11. Remove and discard the O-Ring* (21A) from the suction/discharge (21 - BVM2 and BVM4 only).
12. Cast Iron Models Only: Clean the O-Ring seat and install a new O-Ring (21A).
13. Install a new lower sleeve O-ring*.
14. Install the new stack without the stainless steel sleeve.
NOTICE: Be sure to align either the small priming hole or the suction interconnector pin hole (located on the bottom stage of the stack) properly in the base of the Suction/Discharge (21). See Figure 12 (not necessary on BVMI/X models).

* Or, on some older models, a paper gasket.

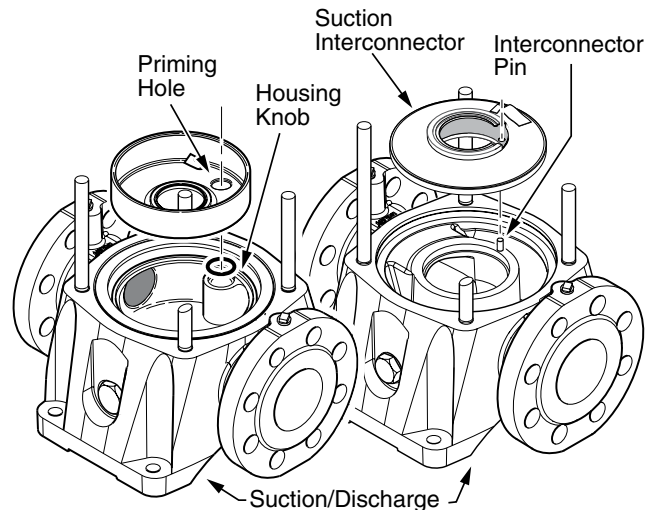


Figure 12 - BVM2, BVM4 – Align Small Priming Port. BVM8, BVM16 – Align Interconnector Pin. No alignment is necessary on BVMI/X models.

- NOTICE:** If the pump was originally built with a splined shaft and is being replaced with a dual flat shaft, there is a special adapter bowl included in the Replacement Stack kit that is to be installed above the suction interconnector and below the replacement stack. If not needed, this adapter bowl may be discarded.
15. Use a rubber mallet to tap the stainless steel sleeve (18) into place.
 16. Install a new mechanical shaft seal (15A and 15B). Refer to *Replacing Mechanical Seal*.
 17. Install a new upper sleeve O-ring* (17).
 18. Install a new round spring ring or conic spring (14).
 19. Reinstall the motor bracket (6) on the pump body. Align the priming plug (10) to its original position.
 20. Oil the threads on the staybolts (19).
 21. Replace the lockwashers, flatwashers, and staybolt nuts (7, 8 and 9) and cross-torque the staybolts. See Table VIII for torque specifications.
 22. Reinstall the motor (1) on the motor bracket (6) and turn the motor to the desired terminal box position.
 23. Follow steps 10 - 21 under **Motor Replacement**. You have now finished changing out the impeller stack.

Mechanical Seal Disassembly:

See Figure 13 for Seal Reference Numbers.

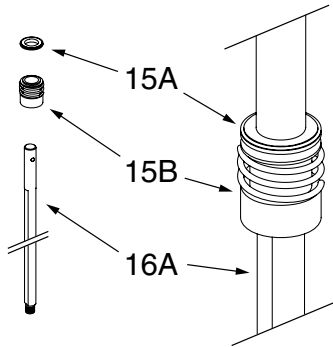


Figure 13

See Figures 14 through 17 for Pump Reference Numbers.

⚠ WARNING Risk of electric shock. Can shock, burn or kill. Disconnect power to pump before disassembly.

1. Follow Steps 1-8 under *Motor Replacement* and proceed with step 2 below.
2. Remove the four nuts, lockwashers, and washers (7, 8, and 9) from the staybolts (19).

3. The shaft seal consists of a stationary seat (15A) and a rotating assembly (15B). Turn the pump head upside down and remove the stationary part of the seal from the seal seat in the motor bracket (6). Discard the old seal.

NOTICE: Use care to not chip or scratch the seal seat during disassembly and assembly.

4. Clean the seal seat with a wet cloth.
5. If replacing only the seal, remove the rotating parts of the seal from the shaft by twisting and pulling up on them. Discard the old seal components.

Mechanical Seal Reassembly:

NOTICE: Before assembly check and clean all sealing and gasket surfaces with a clean wet cloth. Replace all seals, gaskets, and O-Rings.

1. Turn the motor bracket (6) upside down.
2. Moisten the seal seat (in the motor bracket) with a small amount of water.
3. Press the stationary half of the seal (15A) into the seal seat in the motor bracket (6). Use finger pressure only. If a tool is used, protect the seal face from tools with a clean, soft cloth.
4. Install the rotating half of the mechanical seal (15B) onto the shaft with the rubber bellows extension towards the stack.

Frequency of Starts and Stops

Check pump cycling frequency and make sure that the pump is not starting more than:

TABLE VII – Maximum Number of Cycles

Cycles	Motor HP Rating
20 times per hour	1/2 - 5 HP motors
15 times per hour	7- 1/2 - 15 HP motors
10 times per hour	20 and 25 HP motors

Frost Protection

1. If you do not use your pump during seasons of frost, drain it and add a glycol based antifreeze (50/50 mixture) to avoid damage.

▲ CAUTION Risk of flooding. Can cause personal injury and/or property damage. Watch the direction of the priming plug and make sure that liquid escaping from it does not injure persons nearby or damage the motor or other components. In hot water installations, pay particular attention to the risk of injury from scalding hot water.

2. Upon restart dispose of spent antifreeze properly.
3. Do not replace the drain plug or tighten the priming plug until you put the pump back in service again.

Regular Maintenance Checks

The following checks should be made at regular intervals:

1. The pump meets required performance and is operating smoothly and quietly.
2. There are no leaks.
3. The motor is not overheating.
4. Remove and clean all strainers and filters in the system.
5. Verify amp draw – check motor amperage.
6. Pump wear rings and shaft require no regular maintenance.

TABLE VIII – Torque Specifications (foot-lbs.) For Cast Iron and Stainless Steel Models

Pump Model Number	Coupling			Motor		Staybolt		Stack Nut	
	Socket Head Screw			Hex Head Capscrew		Hex Nut		Hex Nut	
	M6 x 20	M8 x 25	M10 x 25	3/8 x 1-1/2	1/2 x 1-1/2	1/2 - 13	5/8 - 11	M8	M12
BVM2 Series	15	20	–	30	35	40	–	10	–
BVM4 Series	15	20	–	30	35	40	–	10	–
BVM8 Series	15	20	45	30	35	–	45	–	30
BVM16 Series	–	20	45	–	35	–	45	–	30

Troubleshooting

▲ WARNING Risk of electrical shock and possible unexpected starts. Disconnect all power to the pump before servicing or working on pump. Make sure that power is locked out and that pump cannot be accidentally started.

Problem	Cause
1. Motor does not run when started	A. Power failure
	B. Fuses blown
	C. Motor starter overload has tripped out
	D. Main contacts in motor starter are not making contact or the coil is faulty
	E. Control circuit fuses are defective
	F. Motor is defective
2. Motor starter overload trips out immediately when power supply is switched on	A. One fuse has blown
	B. Contacts in motor overload relay are faulty
	C. Cable connections are loose or faulty
	D. Motor winding is defective
	E. Pump mechanically blocked
	F. Overload setting is too low
3. Motor starter overload trips out occasionally	A. Overload setting is too low
	B. Low voltage at peak times
4. Motor starter has not tripped out but the motor does not run	A. Check 1 A), B), D,) and E)
5. Pump capacity is not constant	A. Pump inlet pressure is too low
	B. Suction pipe/pump partly blocked
	C. Pump is sucking air
6. Pump runs but gives no water	A. Suction pipe/pump blocked
	B. Foot or non-return valve is blocked in closed position
	C. Leakage in suction pipe
	D. Air in suction pipe or pump
	E. Motor rotates in the wrong direction
7. Pump runs backwards when switched off	A. Leakage in suction pipe
	B. Foot or non-return valve is defective
	C. Foot valve is blocked in open or partly open position
	D. Non return valve leaks or is blocked in open or partly open position
	E. Discharge valve is defective
8. Leakage from shaft seal	A. Pump shaft position is incorrect
	B. Shaft seal is defective
9. Noise	A. Cavitation is occurring in the pump
	B. Pump does not rotate freely (That is, there is increased frictional resistance) because of incorrect shaft position

Limited Warranty

BERKELEY warrants to the original consumer purchaser ("Purchaser" or "You") of the products listed below, that they will be free from defects in material and workmanship for the Warranty Period shown below.

Product	Warranty Period
Water Systems:	
Water Systems Products — jet pumps, small centrifugal pumps, submersible pumps and related accessories	<i>whichever occurs first:</i> 12 months from date of original installation, or 18 months from date of manufacture
Pro-Source™ Composite Tanks	5 years from date of original installation
Pro-Source™ Steel Pressure Tanks	5 years from date of original installation
Pro-Source™ Epoxy-Lined Tanks	3 years from date of original installation
Sump/Sewage/Effluent Products	12 months from date of original installation, or 18 months from date of manufacture
Agricultural/Commercial:	
Centrifugals – close-coupled motor drive, frame mount, SAE mount, engine drive, VMS, SSCX, SSHM, solids handling, submersible solids handling	12 months from date of original installation, or 24 months from date of manufacture
Submersible Turbines, 6" diameter and larger	12 months from date of original installation, or 24 months from date of manufacture

Our limited warranty will not apply to any product that, in our sole judgement, has been subject to negligence, misapplication, improper installation, or improper maintenance. Without limiting the foregoing, operating a three phase motor with single phase power through a phase converter will void the warranty. Note also that three phase motors must be protected by three-leg, ambient compensated, extra-quick trip overload relays of the recommended size or the warranty is void.

Your only remedy, and BERKELEY's only duty, is that BERKELEY repair or replace defective products (at BERKELEY's choice). You must pay all labor and shipping charges associated with this warranty and must request warranty service through the installing dealer as soon as a problem is discovered. No request for service will be accepted if received after the Warranty Period has expired. This warranty is not transferable.

BERKELEY SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, OR CONTINGENT DAMAGES WHATSOEVER. THE FOREGOING LIMITED WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESS AND IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE FOREGOING LIMITED WARRANTIES SHALL NOT EXTEND BEYOND THE DURATION PROVIDED HEREIN.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on the duration of an implied warranty, so the above limitations or exclusions may not apply to You. This warranty gives You specific legal rights and You may also have other rights which vary from state to state.

This Limited Warranty is effective June 1, 2011 and replaces all undated warranties and warranties dated before June 1, 2011.

In the U.S.: BERKELEY, 293 Wright St., Delavan, WI 53115
In Canada: 269 Trillium Dr., Kitchener, Ontario N2G 4W5

**Repair Parts
BVM2
BVM4**

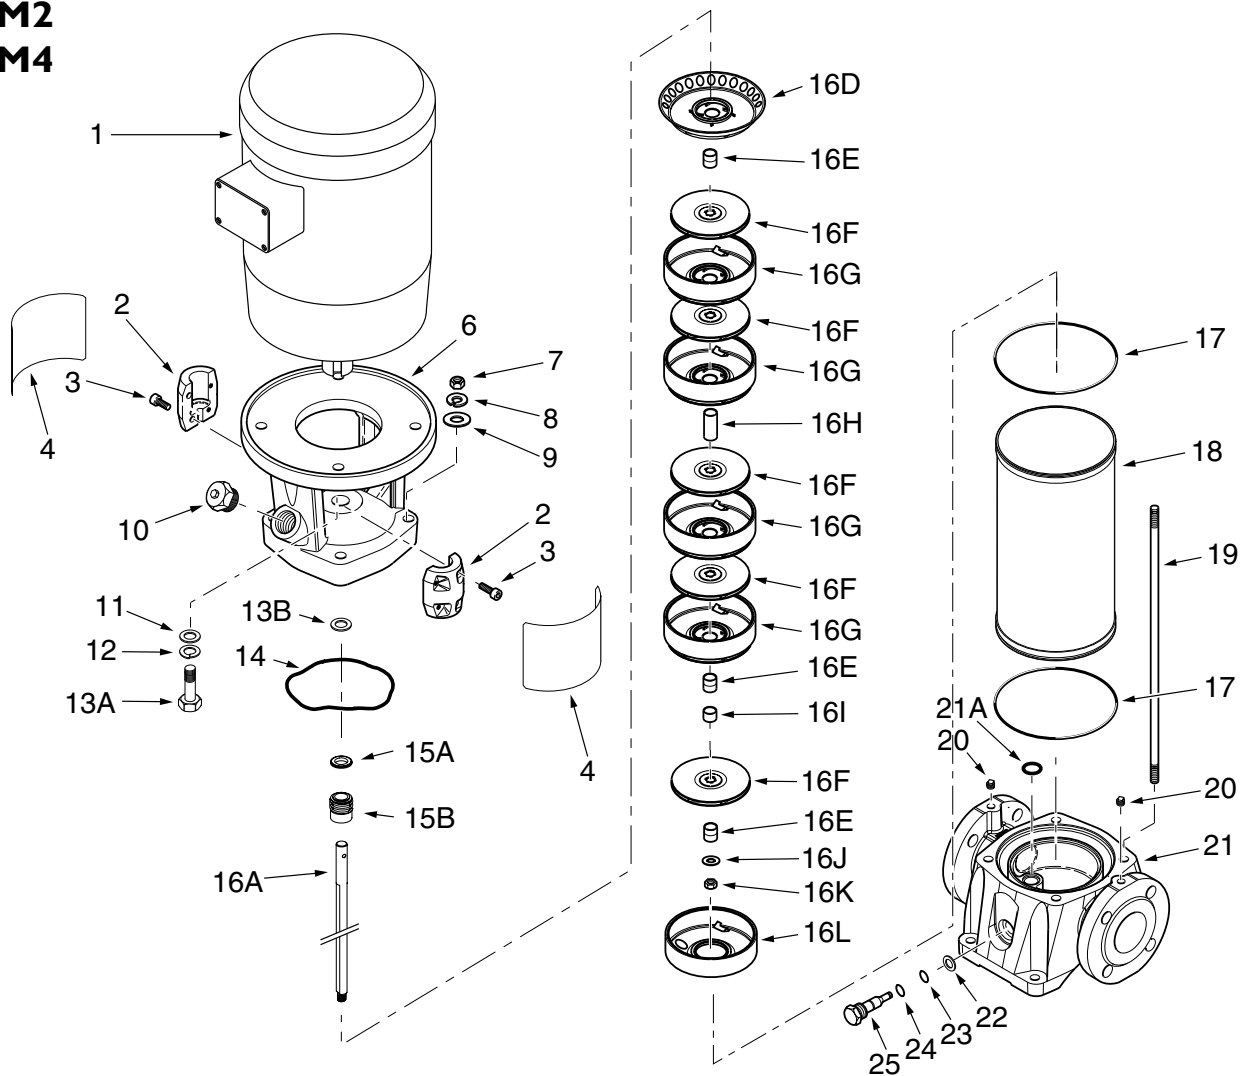


Figure 14 - Exploded View BVM2 and BVM4

Ref.	Description
1	Motor
2	Coupling Half
3	Socket Head Screw
4	Coupling Guard
6	Motor Bracket
7	Staybolt Nut
8	Staybolt Lockwasher
9	Staybolt Flat Washer
10	Vented Priming Plug
11	Flatwasher
12	Lockwasher
13A	Capscrew
13B	Collar
14	Spring Ring
15A	Stationary Half of Mechanical Seal
15B	Rotating Half of Mechanical Seal
16	Replacement Stack Kit (Incl. Key Nos. 16A thru 16L)
16A	Shaft

Ref.	Description
16D	Top Diffuser
16E	Spacer
16F	Impeller
16G	Diffuser
16H	Spacer
16I	Bearing
16J	Shaft Washer
16K	Nut
16L	Suction Chamber
17	Sleeve O-Ring (Gasket on older models)
18	Stainless Steel Sleeve
19	Staybolt
20	Pipe Plug
21	Suction/Discharge
21A	O-Ring (Bottom Chamber)
22	Drain Plug Gasket
23	O-Ring
24	O-Ring
25	Drain Plug

Repair Parts BVM8 BVM16

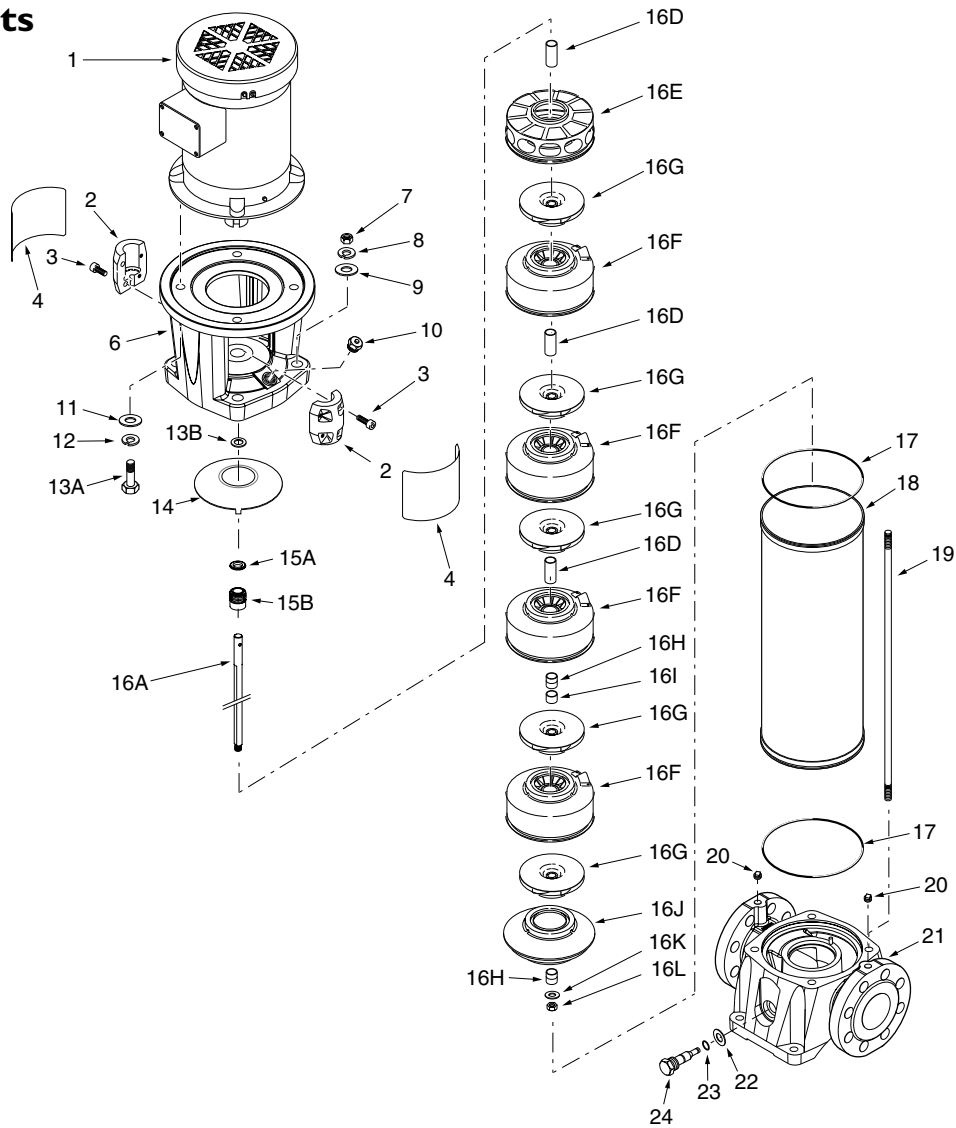


Figure 15 - Exploded View BVM8 and BVM16

Ref.	Description
1	Motor
2	Coupling Half
3	Socket Head Screw
4	Coupling Guard
6	Motor Bracket
7	Staybolt Nut
8	Staybolt Lockwasher
9	Staybolt Flat Washer
10	Vented Priming Plug
11	Flat Washer
12	Lock Washer
13A	Capscrew
13B	Collar
14	Conic Spring
15A	Stationary Half of Mechanical Seal
15B	Rotating Half of Mechanical Seal
16	Replacement Stack Kit (Incl.16A thru 16L)
16A	Shaft

Ref.	Description
16D	Spacer
16E	Upper Intermediate Chamber
16F	Diffuser
16G	Impeller
16H	Spacer
16I	Bearing
16J	Suction Chamber
16K	Shaft Washer
16L	Nut
17	Sleeve O-Ring (Gasket on older models)
18	Stainless Steel Sleeve
19	Staybolt
20	Pipe Plug
21	Suction/Discharge
21A	O-Ring (Bottom Chamber)
22	Drain Plug Gasket
23	O-Ring
24	Drain Plug

Repair Parts
BVMI/X2
BVMI/X4

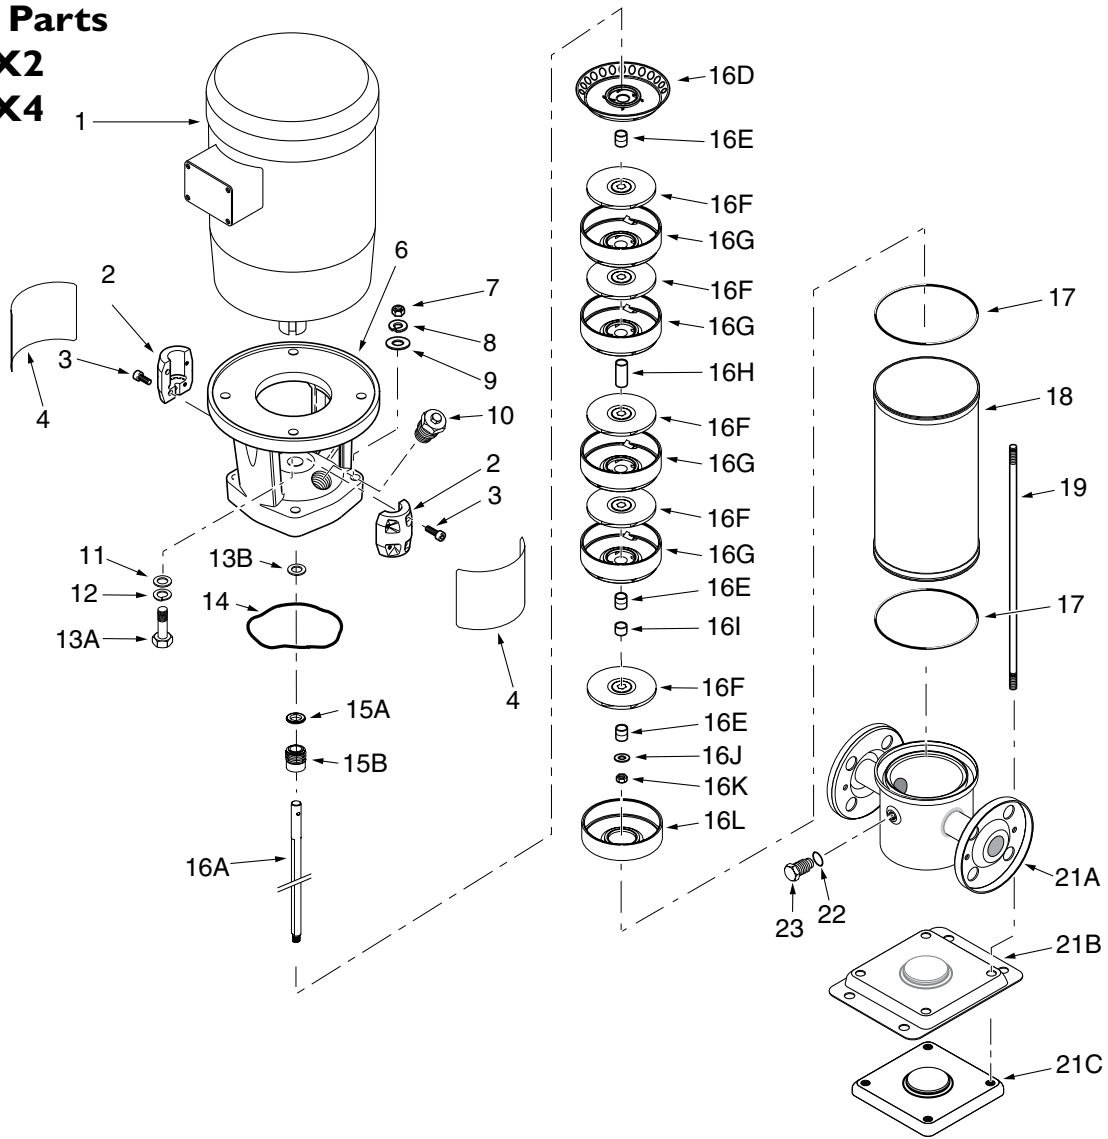


Figure 16 - Exploded View BVMI/X2 and BVMI/X4

Ref.	Description
1	Motor
2	Coupling Half
3	Socket Head Screw
4	Coupling Guard
6	Motor Bracket
7	Staybolt Nut
8	Staybolt Lockwasher
9	Staybolt Flat Washer
10	Vented Priming Plug
11	Flatwasher
12	Lockwasher
13A	Capscrew
13B	Collar
14	Spring Ring
15A	Stationary Half of Mechanical Seal
15B	Rotating Half of Mechanical Seal
16	Replacement Stack Kit (Incl. Key Nos. 16A thru 16L)

Ref.	Description
16A	Shaft
16D	Top Diffuser
16E	Spacer
16F	Impeller
16G	Diffuser
16H	Spacer
16I	Bearing
16J	Shaft Washer
16K	Nut
16L	Suction Chamber
17	Sleeve O-Ring (Gasket on older models)
18	Stainless Steel Sleeve
19	Staybolt
21A	Suction/Discharge
21B	Base
21C	Base Reinforcement
22	O-Ring
23	Drain Plug

Repair Parts BVMi/X8 BVMi/X16

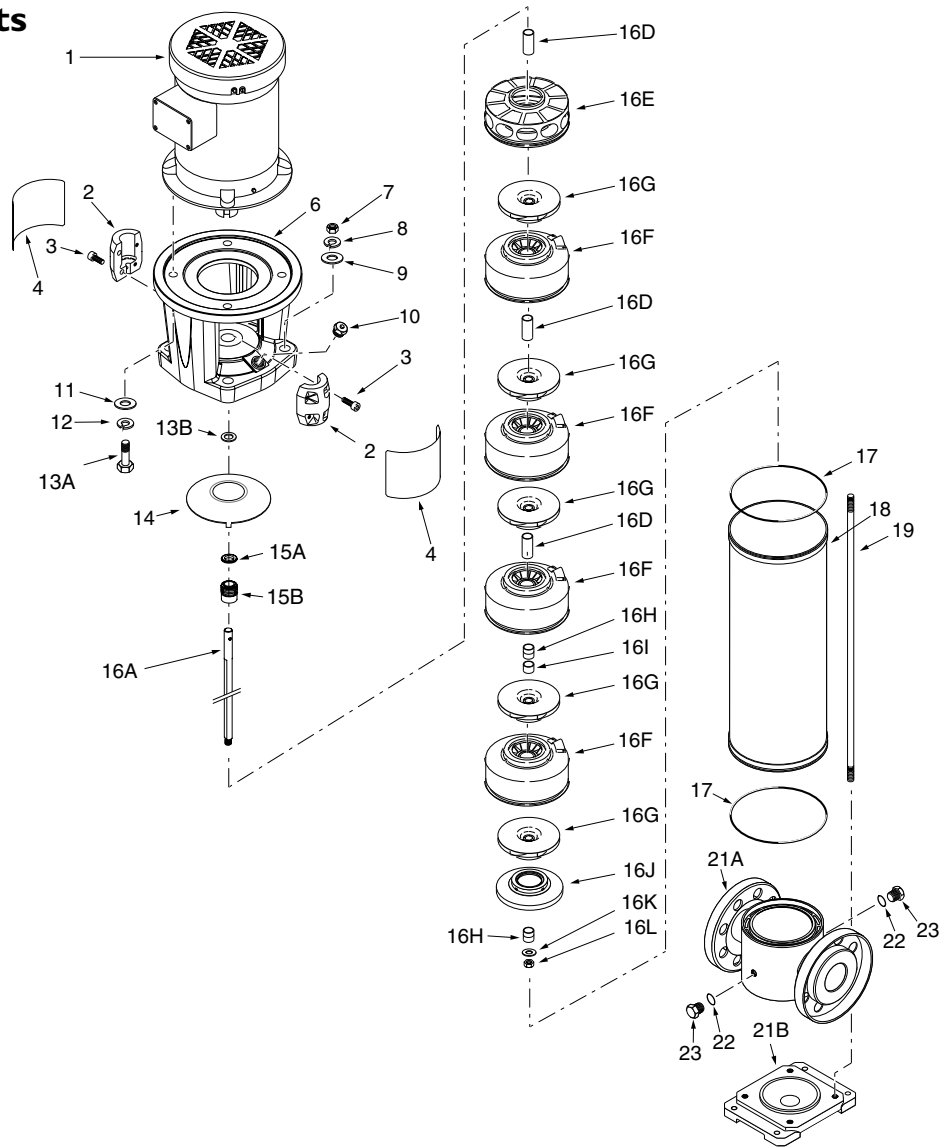


Figure 17 - Exploded View BVMi/X8 and BVMi/X16

Ref.	Description
1	Motor
2	Coupling Half
3	Socket Head Screw
4	Coupling Guard
6	Motor Bracket
7	Staybolt Nut
8	Staybolt Lockwasher
9	Staybolt Flat Washer
10	Vented Priming Plug
11	Flat Washer
12	Lock Washer
13A	Capscrew
13B	Collar
14	Conic Spring
15A	Stationary Half of Mechanical Seal
15B	Rotating Half of Mechanical Seal

Ref.	Description
16	Replacement Stack Kit (Incl. 16A thru 16L)
16A	Shaft
16D	Spacer
16E	Upper Intermediate Chamber
16F	Diffuser
16G	Impeller
16H	Spacer
16I	Bearing
16J	Suction Interconnector
16K	Washer
16L	Lock Nut
17	Sleeve O-Ring (Gasket on older models)
18	Stainless Steel Sleeve
19	Staybolt
21A	Suction/Discharge
21B	Base
22	O-Ring
23	Drain Plug

This page intentionally left blank

